

# LIFT **thOR** **RC PRO PLUS**

Utility mount for DJI RC PRO PLUS


by Thor's Drone World

User's Manual

Congratulations  
on your new

# LIFTHOR


**RC PRO  
PLUS**

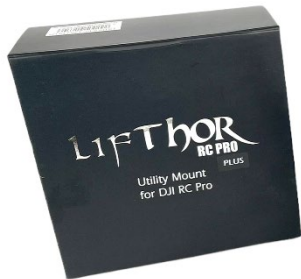

Utility mount for DJI RC PRO PLUS

# Content:

- A. LifThor RC PRO PLUS Utility Mount
- B. Pre-Installed Quick release bracket
- C. Tripod Knob screw ( $\frac{1}{4}$ "-20)
- D. 3x Hex Keys
- E. HDMI 4K High Speed cable
- F. Wrench
- G. 4 x Replacement screws (M2.5 x8)
- H. Mounting screws for quick release (female) plate\* if needed

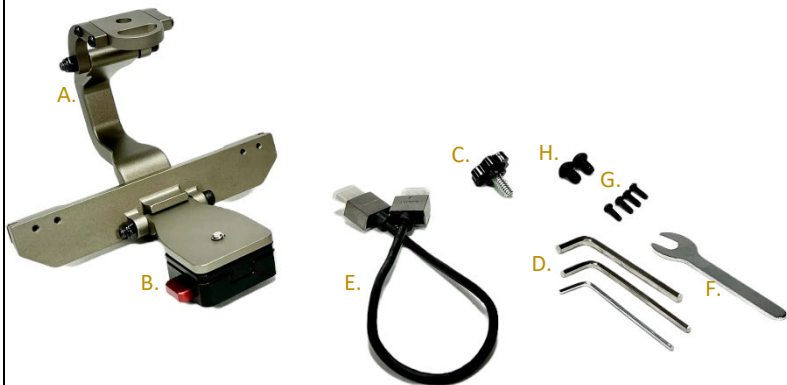

## Pre-Installed Quick Release bracket



Your **LifThor RC PRO PLUS** comes with a pre-installed quick release bracket for it to be installed on any Tripod device / StrapThor® - body tripod or similar devices. Press the red button to release the female plate and mount it to your tripod. We have provided 2 x mounting screws (1/4"-20 x 3/8") in case needed.

# How to mount:

Remove the extended utility arm from the base of the mount by unscrewing the 3 screws located on the rear with one of the provided hex keys.





Remove the screws from the small brackets located at the rear of the base mount with the smallest hex key provided.

Align the controller support stand with the **LifThor RC PRO PLUS** mount, as shown. The back plate has indentations to provide a secure grip to the stand.



Screw the small brackets back in place. We recommend placing all four screws before tightening them for an even grip





Re-attach the extended utility arm to the base of the mount. Once again, place all 3 screws before tightening them, starting with the bottom screw.



Now, your **LifThor RC PRO PLUS** mount is properly installed. To access the DJI RC PRO PLUS battery bay there is no need to unmount it. The LifThor mount is cleverly designed for you to fold backwards the controller to access the batteries as shown in the pictures.



\*If needed you can tighten / loosen the hinge with the (bigger) hex key and wrench provided.



## How to mount an additional monitor (or any other utility / device)

To set the angle of the utility mount use the provided  
(big) Hex Key and wrench to tighten it in place



Use the ¼"-20 Tripod knob screw provided to secure the monitor \*(or any other utility) by threading the knob through the middle hole of the top plate

\*If needed use a 6mm washer





We recommend the use of a Quick Release Bracket for convenience.



\* Sold separately

[www.lifthor.com](http://www.lifthor.com)



MADE IN  
★ **NORWAY** ★  
PREMIUM QUALITY

*Designed & produced by a Norwegian Viking*